



f-POD Eco—Ultra Series

Reconnecting Battery After Flight

11-05-2021

**To comply with current ITAT regulations, the battery in the f-POD
has to be disconnected and insulated before flight**



Unlock 4 x turn locks & remove case lid



Locate plastic bag
containing key & cable tie
cut cable tie to release bag

Unlock 2 x door locks

Cut and remove
cable tie which
secures external
battery cable

Open control box door to reveal battery connections
fixed with tape to the trunking




Remove the tape and carefully cut the cable tie
holding a plastic bag to the cables.

This bag contains 2 x M6 screws and washers to secure
the battery cables to the battery



Remove the plastic tape from the battery to reveal the
battery terminals

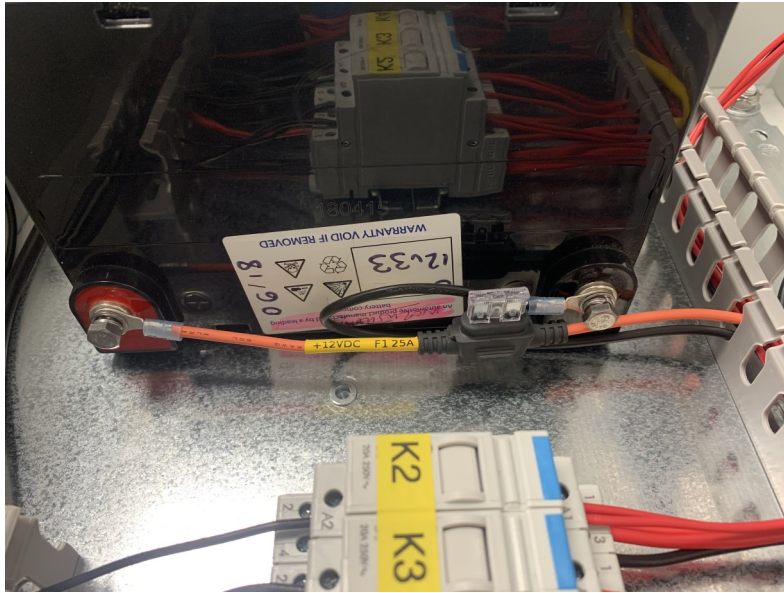

Reconnect the battery cables

The fused cable marker +12VDC to the red positive terminal on the battery

The black cable to the black negative terminal on the battery

Ensure the bolts are tight



Close the control box and make sure both catches are securely locked

Re fold the external battery cable as shown below and
secure with the new cable tie



Replace and secure the case lid
test the machine for operation

