

Resetting f-POD PC Bios



Remove 2 screws from SSD Cover




Remove 1 screw securing SSD card assy




Slide SSD Card assy out carefully.

Remove 6 screws securing back cover and lift off

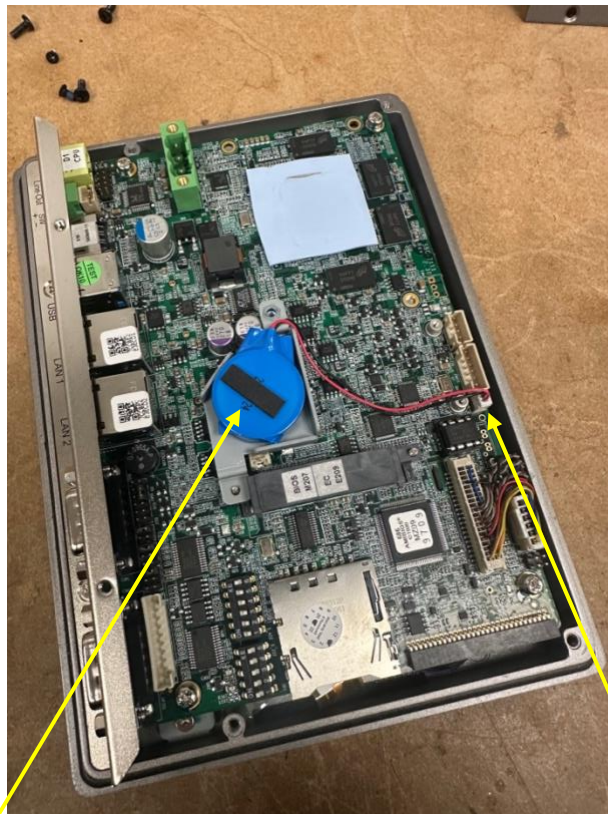


Bios Battery


Battery connector

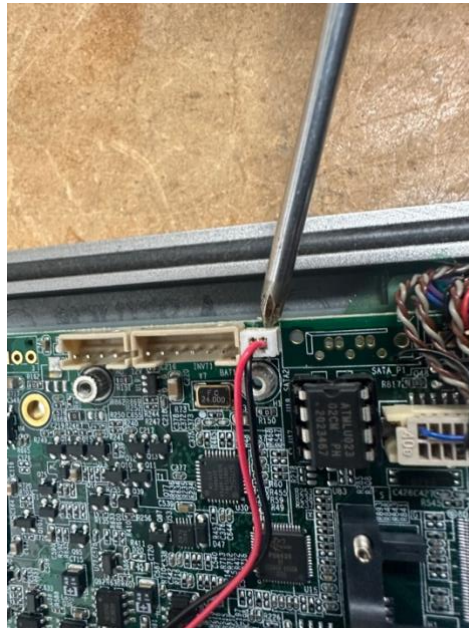

Identify Bios Battery connector

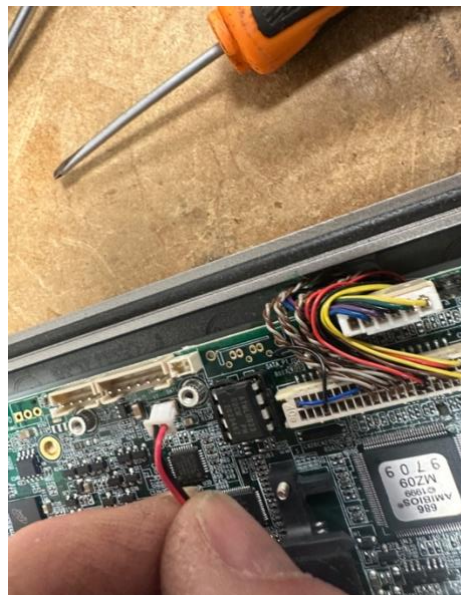

Carefully remove connector from PCB

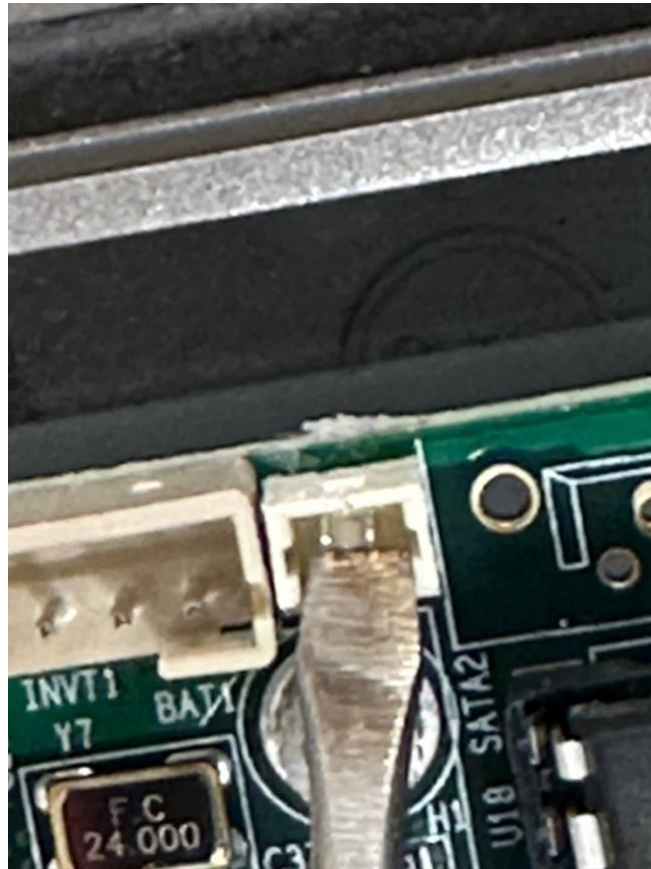

Carefully short the connector pins together using a screwdriver for 5 seconds.

Refit the connector to the PCB and re assemble the PC in
reverse order of these instructions.

Re-install into the f-POD cabinet and test.